cord™

mi-fi four owners' manual

Introduction

Thank you for purchasing a CORD mi-fi four, powered speaker system. The mi-fi four is just one product in our range embracing our philosophy of "*extraordinary audio visual gear*".

This product has been designed and engineered to give you many years of trouble free listening enjoyment. Please ensure you carefully read this manual to gain the maximum benefit from your purchase.

We suggest you keep your original proof of purchase receipt, this manual and the original packaging for future reference, in case you need to move your product, or in the unlikely event that you need to return the product for service.

Product updates, technical info, warranty and service centre details are available on our web site at www.cord-av.com.

The lightning flash with the arrowhead symbol inside an equilateral triangle is intended to alert you to the presence of a non-insulated "dangerous voltage" inside the product that may be of sufficient magnitude to constitute the risk of electric shock.

The exclamation point inside an equilateral triangle is intended to alert you to the presence of important operating, maintenance or servicing instructions detailed in this manual.

Contents

- Introduction 1
- Important safety messages 3
- What's in the box 4
- Preparing for use 5
- iPod adaptors 6
- Set up 7
- Basic operation 9
- Troubleshooting 11
- Specifications 12
- Warranty 13

Made for iPod

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

® iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

Important safety messages

- Before you power on your new CORD product, to ensure safe and efficient operation, please take the time to read these messages.
- Keep these instructions in a safe place for future reference.
- Pay attention to all warnings as these are important to ensure your safety and the optimum operation of this product.
- Always use this product in accordance with the instructions.
- When the volume is high, the product can produce sound levels sufficient to damage your hearing or the hearing of others. Operate at safe, sensible levels.
- Do not use this product near water or in direct sunlight.
- Do not place objects filled with water on or near this product.
- Do not expose this product to rain or moisture of any kind.
- Do not use near any cooking, heating, cooling or ventilation appliances.
- Do not block any of the ventilation openings on the product.
- Use this product only on a stable and level surface.
- Use the correct insert for your iPod to avoid damage to the iPod or connector.
- Unplug this product during lightning storms or when the product will be unused for long periods of time.
- Only use the power supply cord, or equivalent, supplied with this product. Please consult a qualified electrician if the plug does not fit your power outlet.
- To ensure your safety, protect the power supply cord from being walked on, cut, pinched, twisted or otherwise compromised.
- No user serviceable parts are used in this product. Refer all servicing to qualified service personnel.
- If the product has been damaged in any way - for example; if the power supply cord or plug is damaged, liquid has been spilled or objects have fallen inside the product, the product has been exposed to rain or moisture, does not operate normally or it has been dropped - refer the product to your nearest service centre.

What's in the box

- One pair of CORD mi-fi four speakers

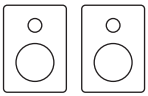

- iPod universal dock adaptors

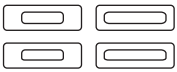

- One remote control



- Foam pad feet for speakers

- One owners manual

- One 3.5mm stereo mini jack to RCA audio cable

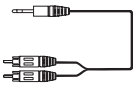

- One 2m, 3.5mm to 3.5mm audio signal cable

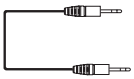

- One 1.2m USB to USB cable

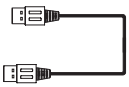

- One 1.5m S-Video cable

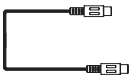

- One AC power supply cord

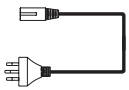

Preparing for use

- To ensure you enjoy maximum benefit from your CORD product, please take a few moments to prepare your product for use.
- Please turn the speakers upside down on a soft, dry surface and apply the foam protective feet to the four corners of the speakers.
- Insert the batteries into the remote control.
- Carefully select the position of the speakers so that connecting cables can easily reach the other devices. If necessary you may need to purchase cables of additional length.
- This system is capable of producing high sound pressure output which may cause vibration if the area of placement is not sturdy and solid. To avoid possible movement and subsequent damage to your CORD product please use this product only on a solid surface.
- Prior to connecting any cables please ensure that the AC Power is disconnected.
- Before switching on this product, please ensure the volume level is set low to avoid instantaneous, loud playback.
- Insert the correct adaptor for your iPod into the dock to ensure a safe and secure connection (see diagram below).
- If your iPod does not have a compatible dock adaptor, you can playback audio by connecting your iPod to the AUX In connector.

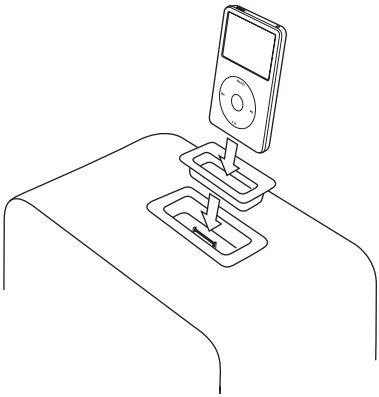

iPod adaptors

iPod nano - 1st generation

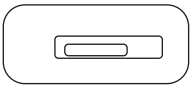

iPod nano - 2nd generation

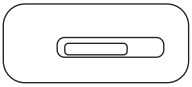

iPod nano - 3rd generation

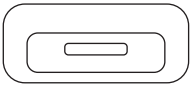

iPod video 30GB & classic 80GB

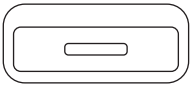

iPod video 60GB, 80GB & classic 160GB

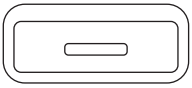

iPod touch

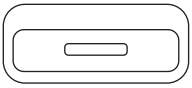

Adaptors for other iPod models may be available, please check our web site for details.

Set up

- To charge and playback media from your iPod, insert your iPod into the dock on the top of the main speaker ❷. Please use the matching dock adaptor to ensure the safe and secure connection of your iPod.
- To sync your iPod with your computer, connect the USB cable from the USB port ❸ to the USB port on your computer. AC Power must be Off to enable Sync.
- To playback video or to view photos from your iPod, connect the S-Video cable to the S-Video port ❶ and to the S-Video input on your tv or monitor. On your iPod select TV-Out - then select On.
- To playback audio from any audio source* connect the 3.5mm connector to the AUX In port ❻ and to the audio source output.
- To playback audio from any audio source* connect the RCA connector to the RCA In port ❼ and to the audio source output.
- To connect the optional subwoofer, connect the SUB Out ❽ to the signal input on your subwoofer using an RCA cable.
- Connect the Speaker Out ❾ on the left (main speaker) using the 3.5mm to 3.5mm cable to the Speaker In on the right speaker.
- Connect the AC Power cord to the AC power socket ❿.

* Audio sources can include any audio source with a RCA line level output such as; CD, DVD & Blu-ray players, media players, computers, TVs, record players, radios, internet radios, etc.

Switch off the AC Power before connecting or disconnecting any accessory cables to ensure correct operation.
Important! Always switch off the AC Power when connecting or disconnecting the USB cable to or from your computer.

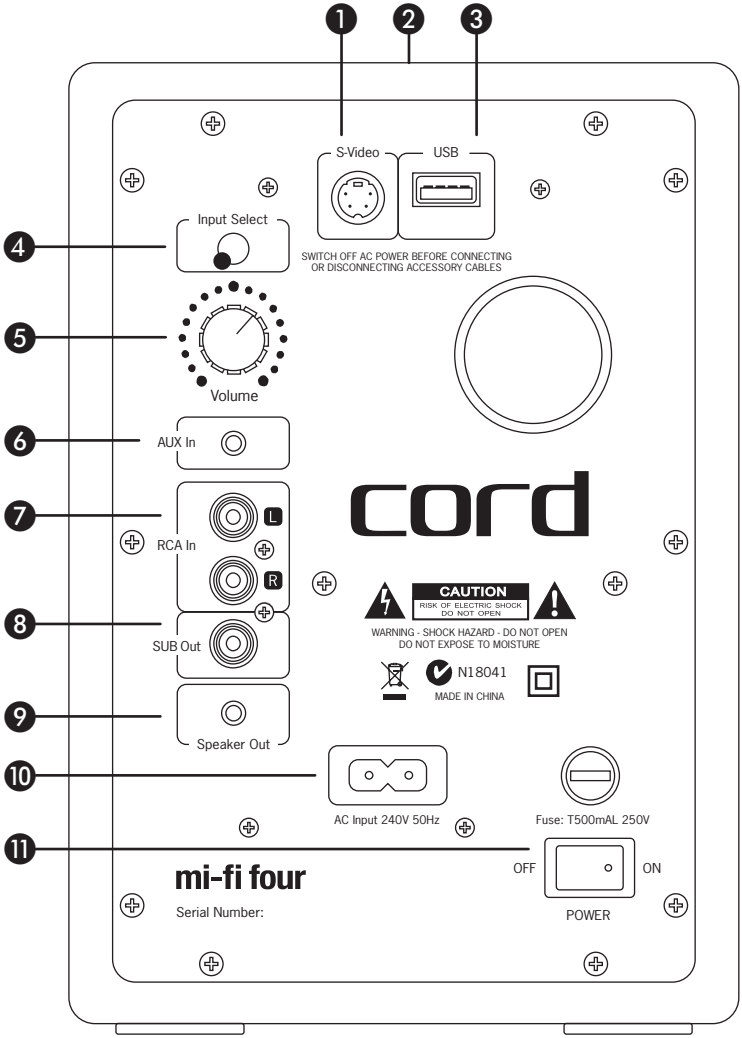
1
2
3
S-Video
USB
SWITCH OFF AC POWER BEFORE CONNECTING
OR DISCONNECTING ACCESSORY CABLES
4
Input Select
5
Volume
6
AUX In
7
RCA In
L
R
8
SUB Out
9
Speaker Out
10
AC Input 240V 50Hz
Fuse: T500mAL 250V
11
OFF
ON
POWER
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
WARNING - SHOCK HAZARD - DO NOT OPEN
DO NOT EXPOSE TO MOISTURE
N18041
MADE IN CHINA
cord
mi-fi four
Serial Number:

Basic operation

Main Unit (Illustration Previous Page)

- To turn ON or OFF, move the Power switch ⓫ to the ON or OFF position.
- To select the source for playback, press the Input Select button ❹. Pressing the Input Select button changes the input in the following sequence: iPod - AUX In - RCA In.
- To increase the volume, turn the Volume control ❺ clockwise. To decrease the volume turn the Volume control counter clockwise.
- To charge your iPod insert the iPod into the dock ❷ and move the Power switch to the ON position. In this mode power is supplied by the speaker's power supply.
- To charge your iPod or sync your iPod from your computer, ensure the Power switch is OFF and connect the USB cable to your computer. Do not turn the Power switch ON - in sync mode, power is supplied by the computer.

Remote Control

❶ iPod Menu Up and Menu Down
❷ iPod Menu
❸ iPod Enter
❹ Selects iPod Shuffle On - Shuffle Tracks - Shuffle Albums - Shuffle Off
❺ Volume Up
❻ Press for Previous Track - Press and hold for Scan Back
❼ Volume Down
❽ Reset system tone control to flat (Normal)
❾ Bass Boost (+) and Bass Cut (-)
❿ Treble Boost (+) and Treble Cut (-)
⓫ iPod Mute
⓬ iPod Backlight On
⓭ Selects iPod Repeat On - Repeat Track - Repeat All Tracks - Repeat Off
⓮ Play / Pause
⓯ Press for Next Track - Press and hold for Scan Forward
⓰ Select iPod source
⓱ Select the RCA In source
⓲ Select the AUX In source

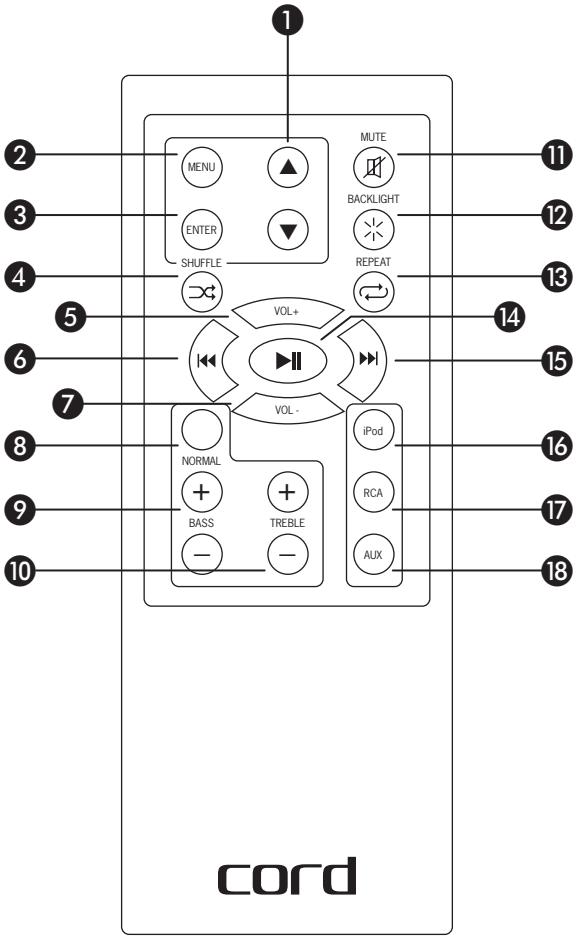
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
MENU
ENTER
SHUFFLE
MUTE
BACKLIGHT
REPEAT
VOL+
VOL -
NORMAL
BASS
TREBLE
iPod
RCA
AUX
cord

Troubleshooting

If you experience any difficulties with the operation of your CORD mi-fi powered speaker system, please check the table below before contacting a service centre.

Problem	Possible cause	Remedy
No Power - no indicator light	• AC Power cord is out • AC socket switch is OFF	• Connect the AC Power cord • Switch ON the AC socket
iPod will not charge	• AC Power cord disconnected • AC socket switch is OFF • USB cable is not connected • USB cable was connected with the AC power on	• Connect the AC Power cord • Switch ON the AC socket • Connect the USB Cable • Switch OFF the AC Power then switch ON the AC Power
iPod will not play audio	• Incorrectly docked • No remote signal • Incorrect source selected	• Remove and re-dock iPod • Check remote operation • Select iPod Source
iPod will not play video	• iPod video not turned on • S-Video cable not connected	• Turn on iPod video in iPod • Connect S-Video cable
No sound output - indicator on	• Wrong input source selected • Input source not connected • iPod not correctly docked • Volume is set too low • System in protection mode	• Select correct input source • Connect input source • Correctly dock your iPod • Slowly increase volume level • Switch OFF the AC Power, wait then switch ON the AC Power
No sound from right speaker	• Audio signal cable is out	• Connect the audio signal cable
Remote control doesn't work	• Battery is low • Obstacle between remote & remote receiver	• Replace the battery • Remove the obstacle
Unusual sound or thumping	• Error in music data • Excessive volume level	• Try different music • Reduce volume level

Under no circumstances should you attempt to repair this product yourself. Please refer all servicing to qualified personnel.
No user serviceable parts are used in this product. Removing the rear cover and tampering will void your warranty.

Specifications

- Two-way powered speaker system
- Studio monitor style
- High gloss paint finish
- 4” magnetically shielded paper cone woofer
- 1” magnetically shielded natural silk dome tweeter
- 60Hz to 20KHz frequency response
- 3.0KHz crossover frequency
- S/N ratio >90dB typical, A-weighted
- 20Watts RMS @ 4 Ohm per channel, 0.5% THD+N
- Input impedance 10K Ohms unbalanced
- Positive signal at + input produces outward LF cone displacement
- 100mV pink noise produces 95dBA output SPL @ 1m max volume
- RF interference protection
- Output current limiting
- Over temperature auto shut down
- Subsonic filter
- Power ON/OFF indicator on front of main speaker
- Three inputs, iPod dock connector, RCA and AUX
- S-Video output for iPod video
- Subwoofer output
- Power requirement ~240VAC 50Hz
- Size 225mm (H) x 152mm (W) x 179mm (D)
- Weight 6.5Kg without packaging

* At CORD we strive for constant product improvement and as a result product design, specifications and functionality are subject to change without notice.

Warranty

Limited Warranty - Australia & New Zealand

CORD products are engineered and manufactured with pride to provide excellent performance, value and years of trouble free operation. In the unlikely event that you should have trouble with your CORD product we are pleased to offer this warranty. It is important that you read the contents of this warranty and be familiar with your rights and obligations.

Scope Of Warranty

CORD warrants to the original retail purchaser that we will repair or replace, at our option, any CORD product which is found to be defective in material and/or workmanship for 12 months from the date of purchase. During the warranty period, an authorised CORD Service Centre will provide both parts and labour free of charge to correct any defect in materials or workmanship, subject to the warranty terms and conditions.

Warranty Terms & Conditions

1. This warranty is valid within Australia and New Zealand for CORD products purchased in Australia or New Zealand for domestic home use only and where used in accordance with any instructions provided with or on the product.
2. The warranty shall be void if the serial number is removed, defaced or altered.
3. You must provide a copy of the original purchase receipt to obtain warranty repairs. We reserve the right to quote for and or charge for repairs outside the warranty period or where the date of original purchase cannot be verified.
4. Warranty repairs must be undertaken by an authorised CORD Service Centre. Visit our web site for the location of your nearest CORD Service Centre.
5. No person is authorised to make or give any assertions, statements or undertakings whether expressed or implied about other, or additional to, the terms of this warranty.
6. We reserve the right to make changes or improvements in design or manufacture without any obligation to change or improve previously manufactured product.
7. CORD shall not be responsible for incidental and or consequential damages or loss.

What Is Not Covered

1. The cost of delivery and insurance in transit to the service centre. It is your sole responsibility to arrange for your product to be forwarded to your nearest CORD Service Centre for repair or replacement.
2. Time taken to investigate your warranty claim where the product is found to be in good working order. This includes where you have not followed instructions contained in any manuals provided with the product or where the fault is caused by use with incompatible equipment and or software.
3. Warranty repairs where the product has been tampered with, altered, modified or repaired by an unauthorised person.
4. Misuse, mishandling or abuse to the product including cosmetic imperfections, scratches, Acts of God and or electrical surge.
5. Normal wear & tear and maintenance, cleaning, periodic check-ups or charges for installation, removal or reinstallation of the product.
6. Audio or video data stored on your iPod and or other devices used with or connected to your CORD product or media of any type.

When You Need Service

1. If you should require warranty service please visit our web site for details of any warranty updates and the location your nearest authorised Service Centre.
2. Securely pack and send the product to the authorised Service Centre. DO NOT return any accessories with your product unless the accessory is malfunctioning.
3. We strongly suggest transit insurance as we cannot be responsible for products lost and or damaged when in transit to the Service Centre.
4. Include a clear description of the problem you are experiencing with your product and your name, address and daytime contact details.

This warranty gives you specific legal rights and you may have other rights which vary from location to location. This limited warranty does not intend to affect these rights in any way whatsoever.

cord-av.com

MF4 SEP 08 AB